




Activity: Fitting Zippered Windows

For some applications, it is necessary to allow for access inside a containment structure or encapsulation after the shrink wrap plastic has been applied. Under-Raps supplies pre-sewn zippered windows that can be applied after the plastic has been shrunk.

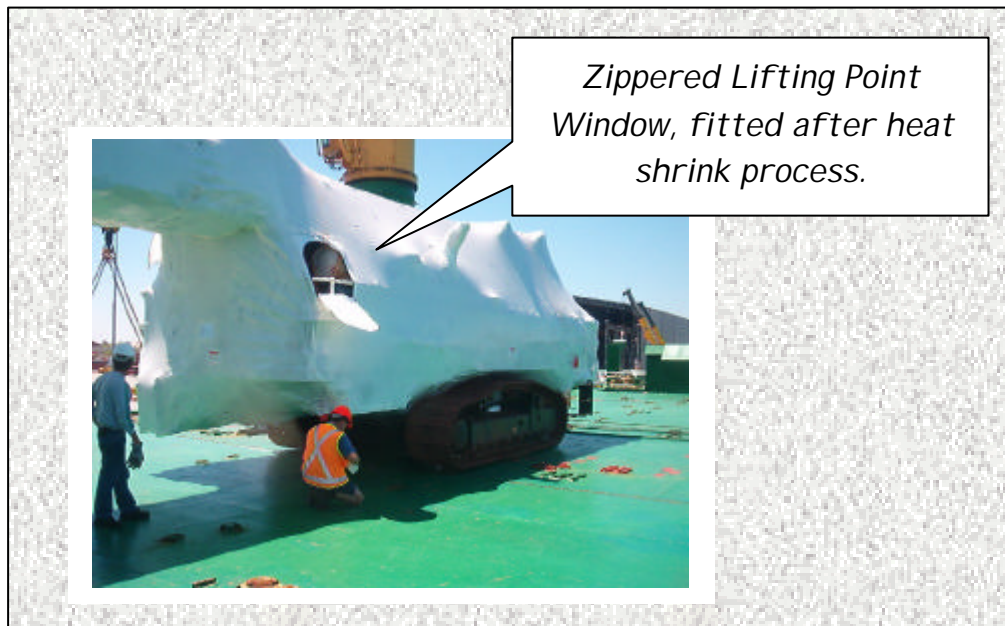

Installing

1. Select a flat surface of the plastic. Peel the backing paper from the double sided tape on the zippered window.
2. Apply the window to the plastic film, with the zip closed, pressing firmly around the edges so that the double sided tape sticks well to the plastic film.
3. Use UV-resistant White Shrink Tape (URTA-135) around the outside edge of the zippered panel, lapping the tape over from the panel to the plastic film.

www.underraps.com.au

Tel: +61 8 9240 5978 Fax: +61 9 9240 5978
greg@underraps.com.au



4. Open the zip and use a sharp knife (box cutter, trimmer, etc) to cut away the plastic film in the opening, taking it back about 20mm from the edge of the zipper.
5. From the inside of the enclosed space, use the tape to again lap from the plastic film to the zipper panel.

Sealing

If the enclosed space does not need to be accessed for a significant period, then after closing the zip, use the UV-resistant white tape to cover over the entire length of the zip.

www.underraps.com.au

Tel: +61 8 9240 5978 Fax: +61 9 9240 5978
greg@underraps.com.au